



Change Memory

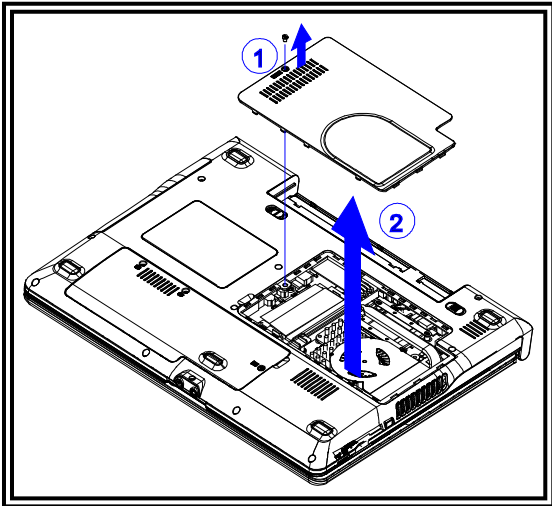

Legend 5-1:

Remove the screw as shown by #1

Remove the compartment door as shown by #2

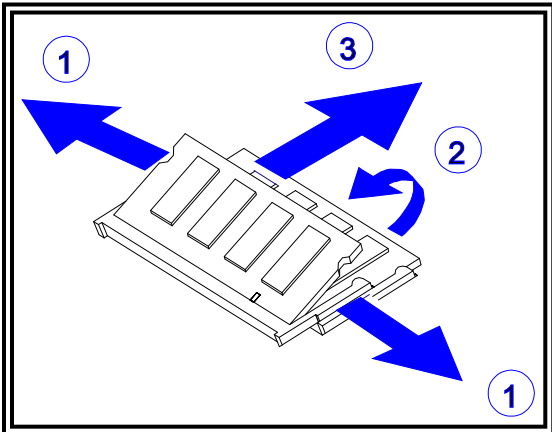


Legend 5-2:

Press the spring-locks sideways as shown by #1.

The first memory module would pop up as shown by #2.

Remove the first memory module as shown by #3.

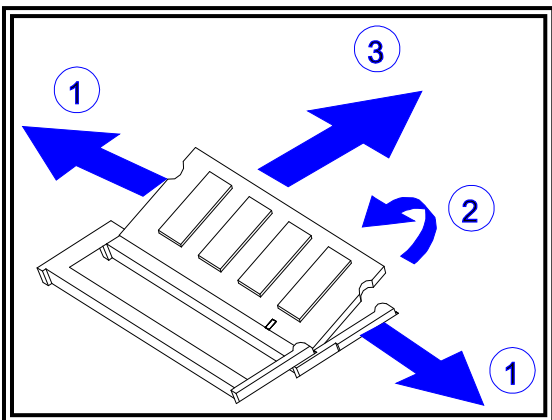

Legend 5-3:

Press the spring-locks sideways as shown by #1.

The second memory module would pop up as shown by #2.

Remove the second memory module as shown by #3.